


**PARTS LIST
AND
INSTRUCTIONS**

**FOR INSTALLING
PLASTIC GRASS
CATCHERS ON
LOCKE MOWERS**

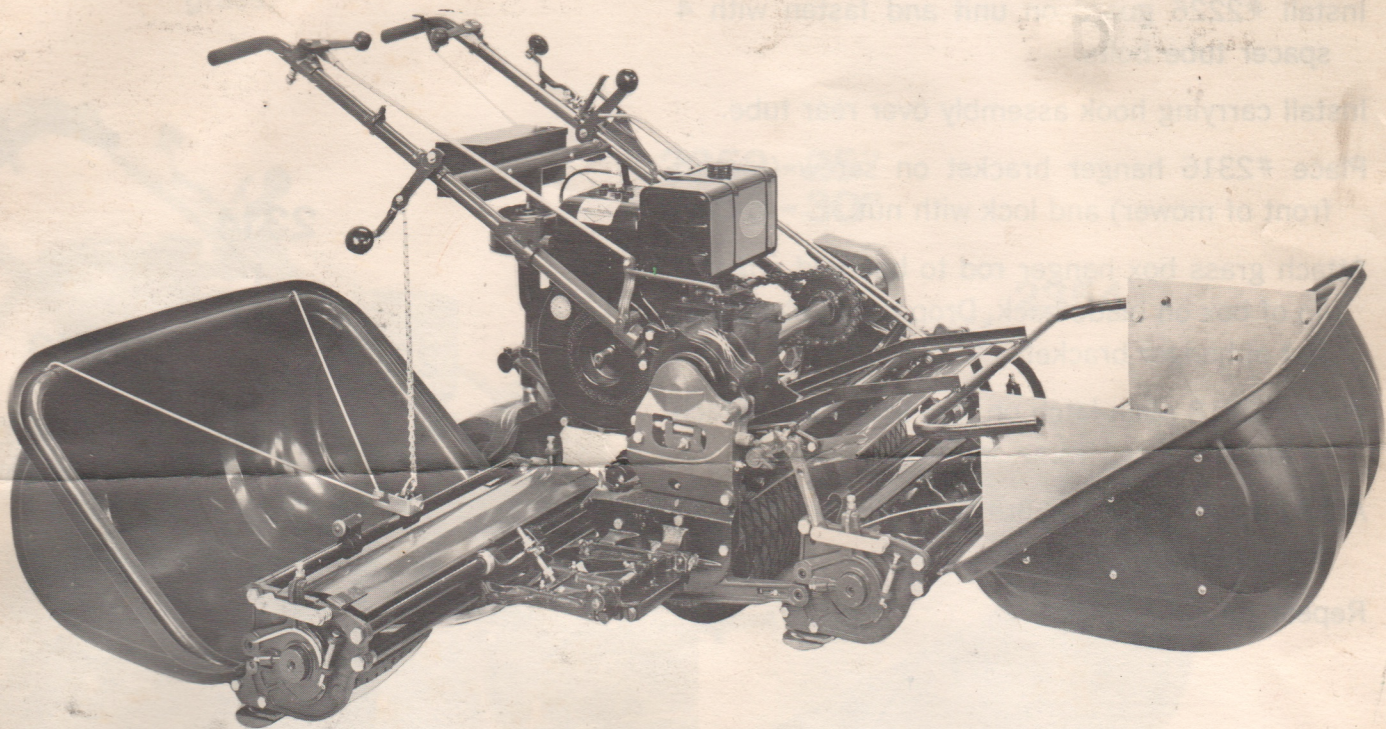

**LOCKE MANUFACTURING DIVISION
STELLAR INDUSTRIES, INC.**

BRIDGEPORT, CONNECTICUT

Instructions for installing Plastic Grass Catchers to Side Unit

Remove side unit from mower.

Remove carrying hook clamps.

Remove 4 spacer tube bolts.

Install #2226 guard on unit and fasten with 4
spacer tube bolts.

Install carrying hook assembly over rear tube.


Place #2316 hanger bracket on screw (toward
front of mower) and lock with nut.

Attach grass box hanger rod to box and position
lip of box on blade back. Drop rod in elongated
slot of hanger bracket.

Place #2318 plain latch on 708 screw and attach
to inside of side frame snug.

Adjust latch to hold box firm to blade back, tighten
screw and lock with nut.

Repeat for other side.

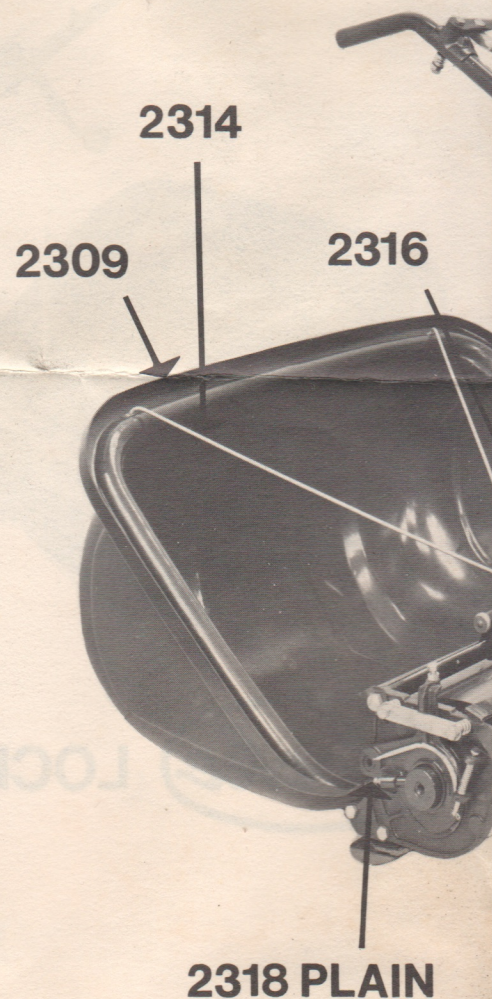

Instructions for installing Plastic Grass Catchers to Front Unit

Assemble #2354 grass box side plates to grass box.

Install #2311 or #2312 grass deflector on rear spacer bar and lock with 2 cotter pins.

Position #2352 or #2353 carrier slot on rear cross member and drop over front cutter unit lifting rod.

Place grass box on carrier studs.

Grass box may be used as a dump box by attaching cord between box and frame handle or the box may be removed for dumping grass.

